


6m POLE WITH 1800 x 900 FLAG

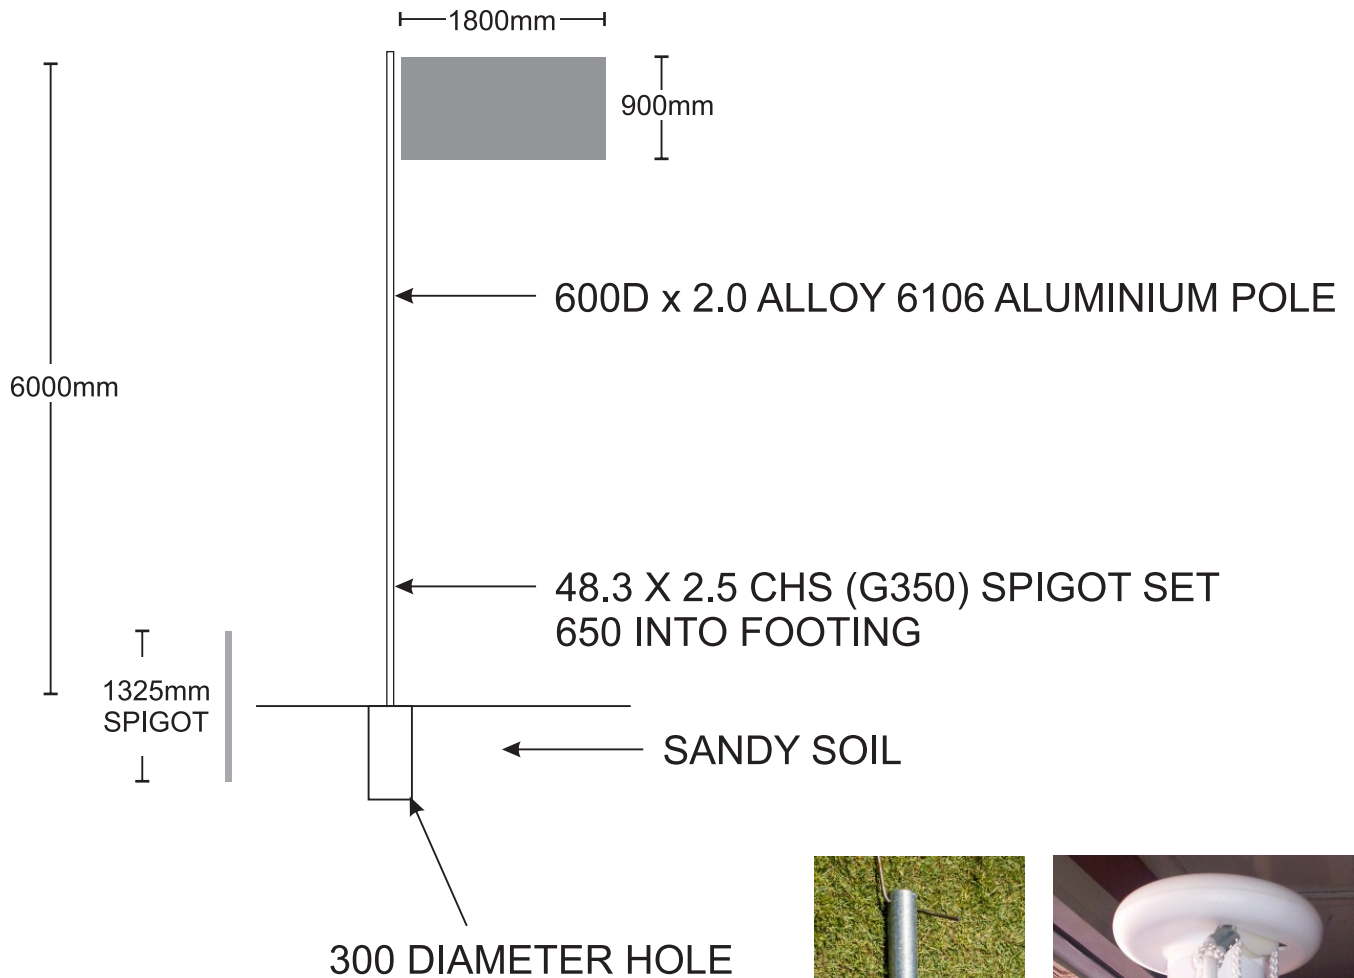

INSTALLATION

- Dig hole 300mm Diameter x 650mm Deep
- Place Spigot in hole
- Add 2 Bags Rapid Set Cement (See instructions)
- Spirit level the Spigot
- Leave 2 hours to set
- Place pole on Spigot
- Secure with tech screw at the base
- Ready to fly the flag in 24 hrs



TUDOR HOUSE
www.tudorhouse.com.au